
Video Quick Set Up


1 Connect Component cable

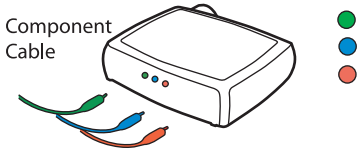

Connect Component cable from DVD, VCR , TV and satellite tuners, camcorders, or video game consoles to **Component**. Component cable may be used for progressive and HDTV sources.

OR


1 Connect S-video cable

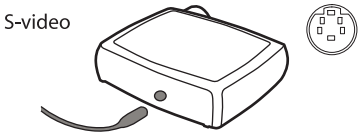

Connect S-video cable from DVD, VCR, TV and satellite tuners, camcorders, or video game consoles to **S-video**. S-video **should not** be used for progressive and HDTV sources.

OR


1 Connect DVI cable

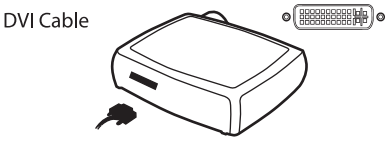

Connect the computer cable from High Definition (HD) sources to DVI. HD sources include HDTV, EDTV, and Progressive devices.


OR

1 Connect Composite cable

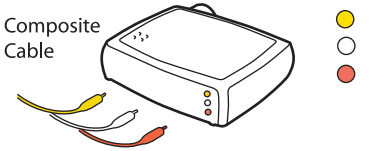


Connect Composite cable from DVD, VCR, TV and satellite tuners, camcorders, or video game consoles to **Video**. Composite cable **should not** be used for progressive and HDTV sources.


2 Connect power cable

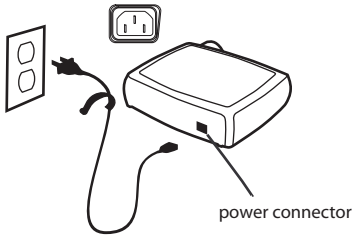

3 Remove lens cap

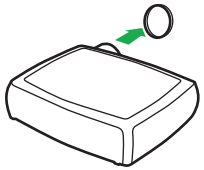


4 Power on projector warm up

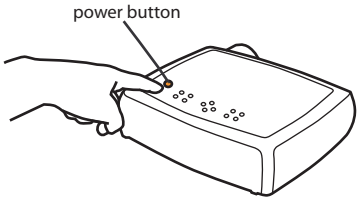


5 Adjust height




6 Adjust zoom and focus

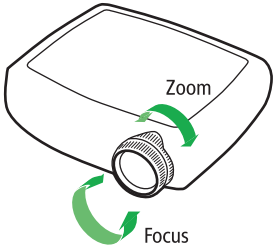


7 Adjust keystone

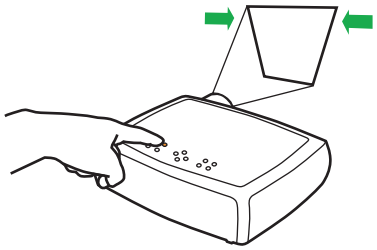

8 Power on video source

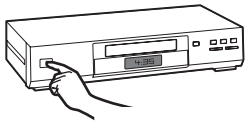

9 Project from source

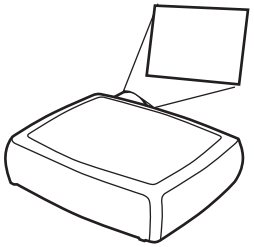

See manual for detailed information and troubleshooting
Please read the Safety Card before setting up the projector

009-0931-00